


# Carson Manufacturing Co., Inc. 5451 North Rural Street

Indianapolis, IN 46220 Phone: (888) 577-6877 Fax: (317) 254-2667 www.carsonsirens.com

# SA-365-20 SIREN AMPLIFIER

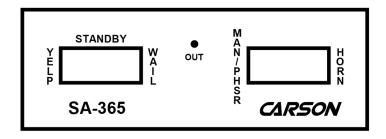

# INSTALLATION AND OPERATING **INSTRUCTIONS**

Carson is a trademark of Carson Manufacturing Company, Inc.



# **TABLE OF CONTENTS**

GENERAL DESCRIPTION	2
SPECIFICATIONS	
UNPACKING	3
INSTALLATION	3
SAFETY PRECAUTIONS	3
MOUNTING	3
OPTION SWITCHES	
ELECTRICAL CONNECTIONS	4-5
OPERATION	6
POWER ON/OFF	6
YELP - STANDBY - WAIL SELECTOR SWITCH	
MANUAL / PHASER - HORN SWITCH	6
AUXILIARY INPUT FUNCTIONS	6
Horn Ring Cycler 2 (HRC2)	6
SERVICE	
PROBLEMS	7
PARTS and ACCESSORIES	7
RETURNS	8
WARRANTY	8

# **GENERAL DESCRIPTION**

The SA-365 Siren Amplifier is designed for single 100W speaker use. The primary operating modes are Yelp, Wail and Standby, selected by a 3-position rocker switch. Horn Override, pushon/push-off Phaser operation in the Yelp and Wail modes, and Manual siren control in the Standby mode are controlled by a momentary 3-position rocker switch. The unit features instanton allowing the unit to produce a tone instantly when a switch is activated. A DIP switch provides options such as Two-Tone, Power C, disable tones, HRC2 operation, Auxiliary function, etc. The unit utilizes short circuit, high voltage, and reverse polarity protection systems for maximum service life. An output light indicates siren signal output for diagnostics and troubleshooting.

#### NOTICE

Due to continuous product improvements, we must reserve the right to change any specifications and information, contained in this manual at any time without notice.

Carson Manufacturing Co., Inc. makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Carson Manufacturing Co., Inc. shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual.

See www carsonsirens com for latest information



WARNING Sound Hazard - Sound level from siren speaker (>120dBA @ 10 feet) may cause hearing damage. Do not operate siren without adequate hearing protection for you and anyone in immediate vicinity. (Ref. OSHA 1910.95 for occupational noise exposure guidelines)

CP5166A 5/26/20

#### **SPECIFICATIONS**

Speaker Load	Single 100W 11ohm		
Input Voltage	10 - 16 VDC (negative ground)		
Input Current	8 AMPS (@14 VDC - single 100W speaker)		
Standby Current	Less than 5mA		
Output Power	105 WATTS RMS MAX. (15 VDC - single 100W speaker)		
Siren Frequency	700Hz - 1500Hz (Two-Tone and Horn = 435 & 585Hz)		
Tones / Cycle Rates	Horn Wail Power C Yelp Phaser Two-Tone 109 CPS 13 CPM 100 CPM 190 CPM 15 CPS 60 CPM		
High Voltage Protection	16 - 18 VDC will cause siren output to cease, resume at normal voltage		
Short Circuit Current	50 AMPS (supply circuit must be capable of supplying this for 1 second)		
Operating Temp.	-15° F to +140°F		
Controls	3-position rocker selector switch (Yelp, Wail and Standby).     3-position momentary rocker switch (Horn and Manual/Phaser toggle).     Positive or Negative Auxiliary input.     8-position DIP switch option selector.		
Connections (6-Pin Conn)	(2) Power, (2) Speaker, and Auxiliary +/		
Size	4-1/2" Wide, 1-13/16" High, 4-13/16" Deep		
Weight	3 LBS.		

## UNPACKING

Inspect contents for shipping damage. If found <u>alert carrier immediately</u>. Contact supplier immediately if any items are missing.

Qty	Item
1	Amplifier
1	CP5037 Bracket, 'U' Dash Mount
2	CP3966 Bolts, 'U' Mounting Bracket
1	CP4688-06 6-Pin Terminal Block Plug
1	CP5166 Instruction Manual

# **INSTALLATION**

Proper installation of the unit is essential for years of safe, reliable operation. Please read all instruction **before** installing the unit. Failure to follow these instructions can cause serious damage to the unit or vehicle and may void warranties.

## SAFETY PRECAUTIONS

For the safety of the installer, vehicle operator, passengers and the community please observe the following safety precautions. <u>Failure to follow all safety precautions and instructions may</u> result in property damage, injury or death.

result in property damage, injury or death.

Qualifications - The installer must have a firm knowledge of basic electricity, vehicle electrical systems and emergency equipment.

**Mounting** - The mounting bracket supplied can be installed above or below the unit. Choose a mounting location convenient to the operator and away from any air bag deployment areas. Inspect behind mounting area for clearance. Assure adequate ventilation to prevent overheating. Consider wire routing and access to connections. Install mounting bracket to vehicle using 1/4" hardware (not supplied). If mounting in a rack or console, make sure that mounting bolts do not enter case more than 1/4".

**Wiring** - Use wiring capable of handling the current required. Make sure all connections are tight. Route wiring to prevent wear, overheating and interference with air bag deployment. Install and check all wiring before connection to vehicle battery.


**Testing** - Test all siren functions after installation to assure proper operation. Test vehicle operation to assure no damage to vehicle.

**Keep These Instructions** - Keep these instructions in the vehicle or other safe place for future reference. Advise the vehicle operator of the location.

CP5166A 5/26/20

#### OPTION SWITCHES

 An 8-position DIP switch on the remote amplifier may be changed to select various options.



Adjusting Option Switches - use a small screwdriver to change switch settings.

**SW-1** Auxiliary Input Polarity - The auxiliary input is normally activated with positive. Turn switch OFF for negative activation.

SW-2	SW-3	Auxiliary Tone in Standby	
ON	ON	(Default) Produces Horn tone while activated.	
OFF	ON	Produces Phaser tone while activated.	
ON	OFF	Produces Manual siren tone while activated.	
OFF	OFF	Activates Horn Ring Cycler 2 (HRC2) function.	

SW-4 Two-Tone - Turn this switch OFF to replace Phaser with Two-Tone.

SW-5 Horn Enable - Turn this switch OFF to disable Horn tone. Horn replaced with Yelp.

**SW-4 & 5 Siren Tone Disable** - All siren tones may be disabled except Horn by turning OFF both switches. All control inputs will produce Horn tone.

**SW-6 Short Manual** - The Manual siren tone will normally fall and die out when released. Turn this switch OFF to have Manual stop immediately.

**SW-7 Power C Enable** - Turn this switch OFF to enable Power C tone. Phaser replaced with Power C.

**SW-8 Phaser Override** - While in standby mode, the manual switch will normally activate manual tone. Turn this switch OFF to momentarily activate Phaser tone.

**HORN RING CYCLER 2 (HRC2)** - Turn on DIP SW-2 and SW-3 to enable this feature. Also connect the auxiliary input to the horn ring or other switch. While the siren is in standby, tap the horn ring to bring the unit out of standby into Wail tone. Repeatedly tapping the horn ring will cycle through Wail, Yelp, and Phaser tones. Tapping the horn ring twice quickly will stop the siren tones and return the unit to standby. Pressing and holding the horn ring will produce Horn tone until released. Then the siren will return to its previous siren tone or standby.

# **ELECTRICAL CONNECTIONS**

Electrical connections to the unit are made using a removable terminal block plug located on the back. A label on the unit identifies each terminal function. Install the plug on the unit before wiring. If the unit needs service the plug can be easily removed without unwiring. The power supply of the unit must be capable of delivering peak currents up to 50 amps for adequate short circuit protection and reliable operation. The preferred source is directly at the vehicle battery. The unit is fused near connector.

Attach leads by stripping 3/8", inserting into plug and clamp by tightening screw. Make sure the screw is tight and the wire can't be pulled out.

# <u>Failure to adequately tighten the screw can result in improper operation or burning the</u> connector and wire.

Wire Size and Termination - The diagram shows the minimum wire size used for each connection, along with recommended lead color. If the wire is longer than 10 ft. use the next larger wire size. Use only high quality crimp connectors for installation on the vehicle.


**Auxiliary Input Connection (AUX) (Optional)** - A momentary input typically connected to the horn ring of the vehicle or other switch. The auxiliary input may be activated with positive or negative voltage. Input current is less than 10 mA.

5/26/20 CP5166A

See OPTION SWITCHES section for polarity selection.

# NOTE: Permanent disconnection of the vehicle horn is NOT recommended.

The auxiliary input may be activated with positive or negative voltage. See **Auxiliary Polarity** under OPTION SWITCHES section for proper activation polarity. Input current is 1 to 20 mA.

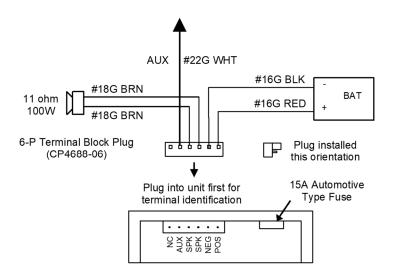

CP5166A 5/26/20

#### OPERATION



Sound Hazard - Sound level from siren speaker (>120dBA @ 10 feet) may cause hearing damage. Do not operate siren without adequate hearing protection for you and anyone in immediate vicinity. (Ref. OSHA 1910.95 for occupational noise exposure guidelines)

#### POWER ON/OFF

The unit is turned on/off automatically (instant on) with the siren or auxiliary input controls.

 
# YELP - STANDBY - WAIL SELECTOR SWITCH

A 3-position rocker selector switch controls the primary operating mode of the siren.

**Yelp** - A rapidly changing tone used in congested areas.

Wail - A slower changing tone used on highways.

Standby - A silent mode that may be overridden anytime.



# MANUAL/PHASER - HORN SWITCH

This momentary rocker switch provides Manual, Phaser **M** toggle, or Horn tones.

Manual - With selector switch in Standby, siren tone rises while pressed and falls when released until silenced. May be optionally replaced with Phaser.

See OPTION SWITCHES section.

**Horn** - Overrides all other siren tones when pressed.

Provides a simulated air-horn tone that can be used to

supplement the normal vehicle horn. Used at intersections or in low noise areas. Horn tone may be disabled.

See OPTION SWITCHES section.

**Phaser** - With selector switch in **Wail** or **Yelp**, this tone override is toggled on and off by repeatedly pressing switch. A very rapid changing tone used at intersections and very highly congested areas. May be optionally replaced with **Two-Tone** or **Power C**. Two-Tone is two alternating frequencies like a European. See OPTION SWITCHES section.

## **AUXILIARY INPUT FUNCTIONS**

The switch or horn ring attached is intended to be momentary.

When the selector switch is in Wail or Yelp, activating auxiliary will produce the Horn tone.

With selector switch in **Standby**, activating auxiliary will normally produce Horn tone. Different tones are available. See OPTION SWITCHES section.

Horn Ring Cycler 2 (HRC2) - this feature may also be added by turning on the HRC2 option. HRC2 is only available while the unit is in **Standby**. Tapping the attached horn ring or other switch, will bring the unit out of standby into Wail tone. Repeatedly tapping the horn ring will cycle through Wail, Yelp, and Phaser tones. Tapping the horn ring twice quickly will stop the siren tones and return the unit to standby. Pressing and holding the horn ring will produce Horn tone until released. Then the siren will return to its previous siren tone or standby.

Selector Switch (Mode)	Manual/Phaser Switch	Horn Switch	Auxiliary Input (Horn Ring)
Standby	Manual (Default) or Phaser	Horn	Horn (Default), Manual, Phaser, or HRC2
Wail or Yelp	Phaser Toggle	Horn	Horn

5/26/20 CP5166A

# **SERVICE**

This unit is designed to provide years of reliable service under even the worst conditions. Many times there may appear to be a problem with the unit when the true problem is in the speaker or improper installation. The following chart shows typical symptoms and possible causes.

A blown siren fuse doesn't necessarily mean that the unit is bad. If a speaker or speaker lead is shorted the fuse will blow before the unit is damaged. Disconnect the SPK leads and replace the fuse. If the **OUT** light on face of unit comes on with Wail switch activated the amplifier is OK. Check the speaker or leads for possible shorting.

## **PROBLEMS**

Symptom	Possible Cause	Check
No power or siren output	Bad speaker Connector loose Amplifier fuse blown Loose connection at power source	Is the OUT light on face coming on in Wail? Is an external fuse or circuit breaker used?  Are the negative leads connected to a good ground?
No siren tones	Bad Speaker High Voltage Protection All siren tones disabled	Is the OUT light on face coming on in Wail? Input voltage must be less than highest rated voltage. Are the option switches set properly?
Distorted siren sound	Speaker assembly loose Intermittent Aux Input connection Low vehicle voltage	Is the speaker bell or tip loose? Is the Aux Input used and wired properly? Input voltage must be greater than lowest rated voltage.
Intermittent siren tone	High Voltage Protection Connector loose Bad power connection Circuit breaker in supply connection	Is the vehicle voltage regulator working properly? Is the connector tight on the back of the unit? Is there a loose connection on a power lead? Is a circuit breaker used with at least a 50A rating?
Horn function stuck on or Manual/Phaser stuck on	Horn switch stuck Manual/Phaser switch stuck Aux Input improperly connected Aux Input Polarity Option set wrong	Does the Horn switch return when released? Does the Manual/Phaser switch return when released? Is the Aux Input used and wired properly? Is the correct polarity used?
Wrong siren tone	Two-Tone option selected Tones disabled	Check option switch settings.
Some siren tones not working	Tone disabled Remote switches wired incorrectly	Check option switch settings. Are the correct switch terminals wired?

# **PARTS and ACCESSORIES**

Part	Description	
CP5035	Cover (not including chassis)	
CP4990-150	Fuse, 15 Amp Mini Automotive	
CP4748-2	Switch, Red Rocker ON - OFF - ON (Yelp - Standby - Wail)	
CP4751-2	Switch, Momentary Red Rocker Switch, (ON) - OFF - (ON) (Manual/Phaser - Horn)	
Accessory	Description *- standard accessory supplied with complete unit	
CP5037 *	Bracket, 'U' Dash Mount	
CP3966 *	Bolts, 'U' Mounting Bracket (typically 2 ea required)	
CP4688-06 *	Connector, 6-pin Terminal Block Plug	
CP5166 *	Instruction Manual	

The following parts and accessories are available from Carson Manufacturing Company, Inc.:

See www.carsonsirens.com for additional information or contact our Service Department at:
E-mail service@carsonsirens.com or Phone (888) 577-6877

CP5166A 5/26/20

# **RETURN**

If you have any questions concerning this or any other Carson product, please contact our **Technical Service Department** at (888) 577-6877. Many issues can be handled over the phone. We can also be reached via e -mail at **service@carsonsirens.com** 

If a product must be returned for any reason, please contact our Technical Service Department to obtain a Returned Merchandise Authorization number (RMA#) before you ship the product to Carson. Please write the RMA# clearly on the package near the mailing label. Be sure to provide a return address, contact and phone number, along with a brief description of the problem.

#### LIMITED WARRANTY

Carson Manufacturing Company, Inc. warrants this new product to be free from defects in material and workmanship, under normal use and service, for a period of five (5) years from the date of delivery to the first user-purchaser.

During this warranty period the obligation of Carson Manufacturing is limited to repairing or replacing, as Carson Manufacturing may elect, any part or parts of such product which after examination by Carson Manufacturing is determined to be defective in material and/or workmanship.

This warranty does not cover labor charges for removal or re-installation of the product. Fuses and lamps are not covered under this warranty.

This warranty does not extend to any unit that has been subjected to abuse, misuse, improper installation or which has not been adequately maintained, nor to units which have problems related to service or modification at any facility other than Carson Mfg.

THERE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL CARSON MANUFACTURING COMPANY, INC. BE LIABLE FOR ANY LOSS OF PROFITS OR ANY INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF ANY SUCH DEFECT IN MATERIALS OR WORKMANSHIP.

5/26/20 CP5166A